



Donaldson™ iCue™ Global Gateway

Installation, Operation and Maintenance Manual



This manual contains specific precautions related to worker safety. The hazard alert image denotes safety related instructions and warnings in this manual. **DO NOT** install, operate, or perform maintenance on this product until you have read and understood the instructions, precautions and warnings contained within this manual.

English
Master Language

F119235 (ENG)
12/2023

IMPORTANT NOTES

This manual has been supplied to assist with the installation, operation, and maintenance of the Donaldson™ iCue™ Global Gateway. Please read the manual before installing, operating, or performing maintenance on this device as it contains specific precautions for workersafety. It is the owner's responsibility to ensure that this manual is available for use by installers, operators and maintenance personnel that will be working with this dust collector accessory. This manual is the property of the owner. **DO NOT** operate the device until you have read and understood the instructions and warnings located in the installation and operation manual.

For additional copies of this manual, contact iCueSupport@donaldson.com.



The Safety Alert Symbol indicates a hazardous situation which, if not avoided could result in death or serious injury. Obey all safety messages following this symbol to avoid possible injury or death. The possible hazards are explained in the associated text messages.

NOTICE

NOTICE indicates a potential situation or practice which is not expected to result in personal injury, but which if not avoided, may result in damage to equipment.

Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of the Donaldson Company, Inc. Donaldson provides this document "as is," without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Donaldson may make improvements and/or changes in this manual or in the product(s) and/or the programs described in this manual at any time.

Contents

- IMPORTANT NOTES i
- 1 Safety Communication 1
- 2 Product Description 2
 - System Description 2
 - Technical Specifications 2
- 3 Operation 3
- 4 Installation 3
 - Location Considerations 3
 - Overview 3
 - Mounting 4
 - Gateway Electrical Installation 4
 - Low Pressure (ΔP) Pneumatic Installation 5
 - High Pressure (Compressed Air) Pneumatic Installation 5
 - Gateway Final Assembly 6
- 5 Replacement Parts List 7
- 6 Terminal Strip Designators 8
- 7 Troubleshooting 9
- 8 Optional Sensor Wiring 11
 - Analog Sensors 11
 - Digital Sensors 13
- Appendix A - Regulatory Information A1
 - Service Notes A3

1

Safety Communication



The Donaldson™ iCue™ Global Gateway should not be used to detect, monitor, warn, or alert personnel to hazards, potential safety issues, or combustion risks. Users should not rely on readings from the product to provide emergency or hazard prevention or for emergency response activities and decisions. Users remain solely responsible for maintaining a safe work environment. All dust collection equipment and accessories should be operated and maintained in accordance with the manufacturer's instructions.

Many factors beyond the control of Donaldson can affect the use and performance of Donaldson products in a particular application, including the conditions under which the product is used.

Since these factors are uniquely within the user's knowledge and control, it is essential the user evaluate the Donaldson products to determine whether the product is fit for the particular purpose and suitable for the user's application.

The device is not designed or approved to be used in any Hazardous Locations. Do not install or operate device in an area classified as hazardous.

Electrical installation must be performed by a qualified electrician.

Only qualified maintenance personnel should service this equipment.

Prior to installing or maintaining equipment, ensure all energy sources are put into a safe condition by following your facilities approved energy-control procedures.

This system does not replace the need for any routine or required monitoring or maintenance of your dust collection system. Donaldson does not guarantee the accuracy of any transmitted values.

2 Product Description

System Description

The Donaldson™ iCue™ Global Gateway is designed for use with Donaldson's iCue™ Connected Filtration Service Equipment

The gateway captures data from sensors and transmits that data wirelessly to the web-based Donaldson iCue application. The gateway is independent of the dust collector control system.

Sensors:

The gateway has internal sensors for sensing filter differential pressure, airflow data and compressed air pressure of the dust collector. The gateway also has inputs for Donaldson approved optional sensors, which are wired into the gateway. Communications: The gateway utilizes a cellular connection to transmit sensor data to the Donaldson iCue application. The cellular data plan and preinstalled SIM card are provided by Donaldson. The SIM card will only work with Donaldson's service and should not be removed.

Note: This manual only covers the installation, operation and troubleshooting of the Donaldson™ iCue™ Global Gateway. Reference the documentation section in the dashboard application for additional information on configuring and using the application.

Technical Specifications

Specifications	
General	
Input Power	Gateway: 7-32VDC; 10W max Supplied Class 2 AC/DC Converter: 90-305VAC, 47-63Hz, 40W max
Cellular Technologies	LTE
Dimensions	7.63 x 4.63 x 3.09 in. (193.80 x 117.60 x 78.49 mm)
Weight	1.5-lbs
Operating Temperature	-40 to 70C (-40 to 158F)
Ingress Rating	IP66
Sensor Ratings	
Clean/Dirty Airlines	+/- 27 inches of H2O (+/- 6.72 Kpa)
Compressed Air Pressure	145 psi (10 bar)
Temperature Range	-40 to 70C (-40 to 158F)
External Inputs	Analog: 4 Inputs; 4-20mA or 0-10V. 24VDC Supply (100 mA max) Digital: 2 Inputs; Dry contact closure
Certifications	
Certifications	FCC, IC, RED, NAL, SRRC, NOM, EFITEL, NBTC

3 Operation

The gateway is always on, monitoring the sensors associated with the solution. If a sensor value exceeds the user-defined alert thresholds, the gateway will communicate that data to the Donaldson iCue application for alerting purposes. Otherwise, during normal operation the gateway communicates to the Donaldson iCue application at predefined intervals. The internal sensors are zero calibrated daily to ensure measurement accuracy over time.

LEDs on the gateway indicate the status of the gateway. Reference the Troubleshooting section for definition of the LED states.

4 Installation



Electrical installation must be performed by a qualified electrician and comply with all applicable national and local codes.

Compressed air installation must be performed by a qualified pipe fitter.

NOTICE

Penetrations into the dust collector must be air and dust tight.

Location Considerations

The gateway should be installed in a convenient location that does not interfere with any safety systems or the normal operation and maintenance of the collector. The preferred location is as high as feasible to increase the cellular signal strength.

Overview

The hardware shipment received includes the gateway and a mounting kit with accessories required for installation; reference Replacement Parts List for what is included in the shipment. There may be situations where additional materials are needed to complete the installation. A typical installation will involve the following steps:

1. Shut down the dust collector and isolate the compressed air supply source.
2. Install the Donaldson gateway.
3. Connect pneumatic tubing to the gateway.
4. Connect optional sensors to the gateway.
5. Attach the antenna to the gateway.

Mounting

Magnets


Magnets with pre-applied adhesive have been supplied to allow for quick and easy installation. The magnets can be applied to the gateway and/or the power supply. To use the magnetic mounts:

1. Verify the device surface is clean and dry.
2. Remove the film from the adhesive disc mounted to the magnet and firmly press the magnet into place.
3. Remove the metallic keeper and insulator from the magnets and mount the device.

Note: Allow 20 minutes for the adhesive to cure prior to mounting the gateway from a metallic surface.


Flange

The gateway and power supply may be mounted using the mounting flanges of each device. Hardware to mount the components using the flanges is to be provided by the installer.

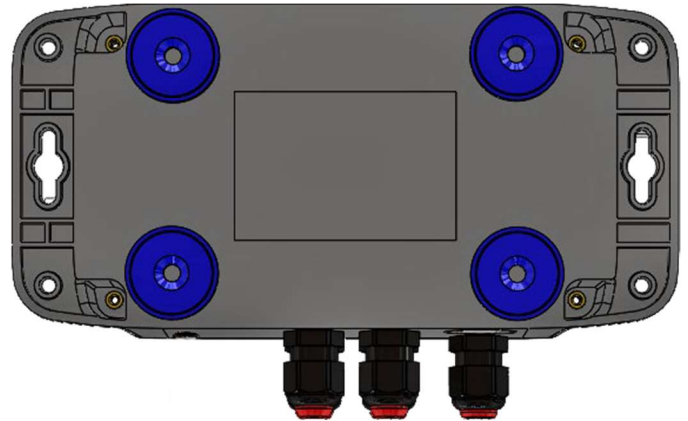


Gateway Electrical Installation

The Gateway requires 7-32 VDC input power. A single-phase power supply is included in the install kit to power the gateway. Reference Terminal Strip Designators for terminal strip locations when installing the VDC power wiring. Reference the power supply label for wire color coding.

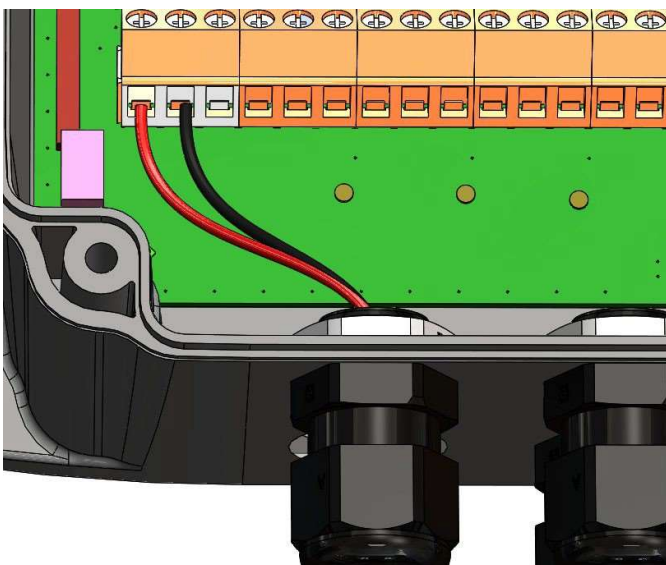

Drawing of Power Supply included in installation kit (120VAC to 24VDC):

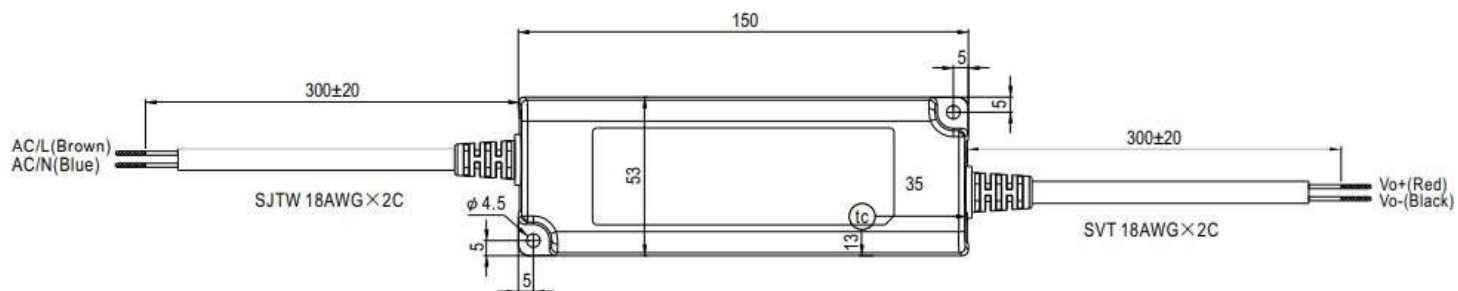


There are three common scenarios for wiring power to the iCue Gateway.

1. 24VDC available in the control panel.


In this scenario the power supply is not required. 24VDC can be wired directly from the panel into the iCue Gateway. Before wiring, confirm there is enough excess power capacity in the control panel to power the gateway. The maximum power required by the gateway is 10 Watts.

24VDC Available in the Panel

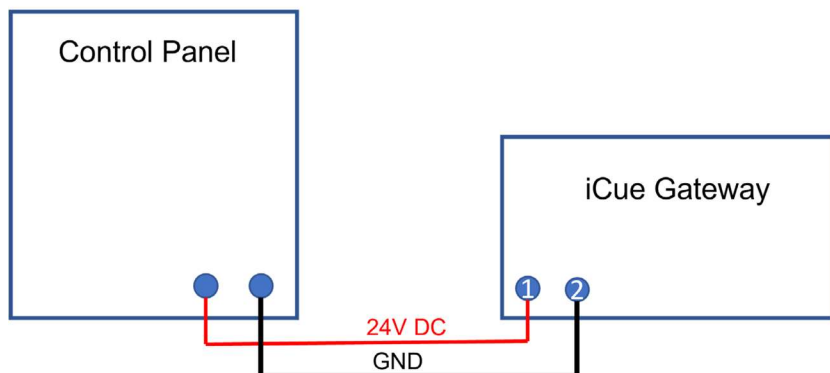

2. **100-240VAC available in the panel.**


When proper AC voltage is available in the panel, that voltage can be wired directly to the power supply included in the installation kit. Before wiring, confirm there is enough excess power capacity in the control panel to power the gateway. The maximum power required by the gateway is 10 Watts. The power supply can be mounted in the control panel if there is room, or it can be external.

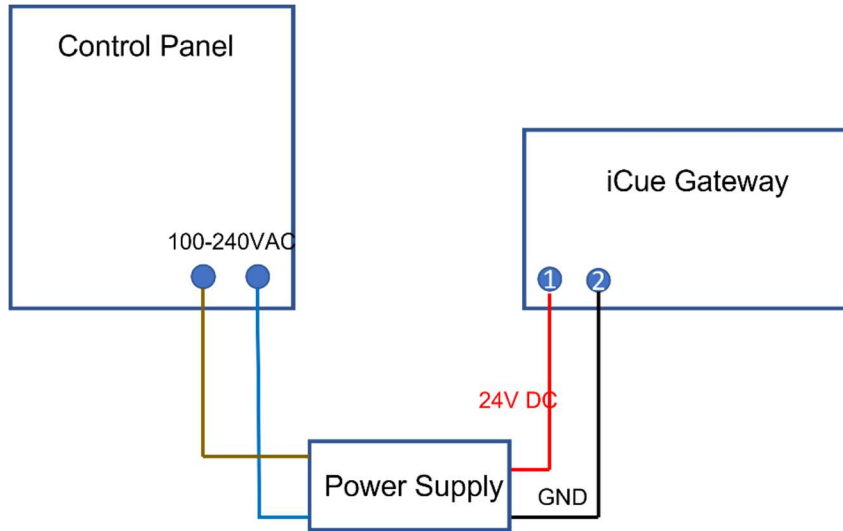

3. **Externally Powered**



When neither 24V DC or 100-240V AC is available in the panel, the iCue Gateway power supply can be connected directly to an external AC source, this will typically be to a junction box or AC plug.

Note: When connecting to a wall plug, an adapter plug is required to connect to the bare wires on the power supply. This is not included in the accessory kit.

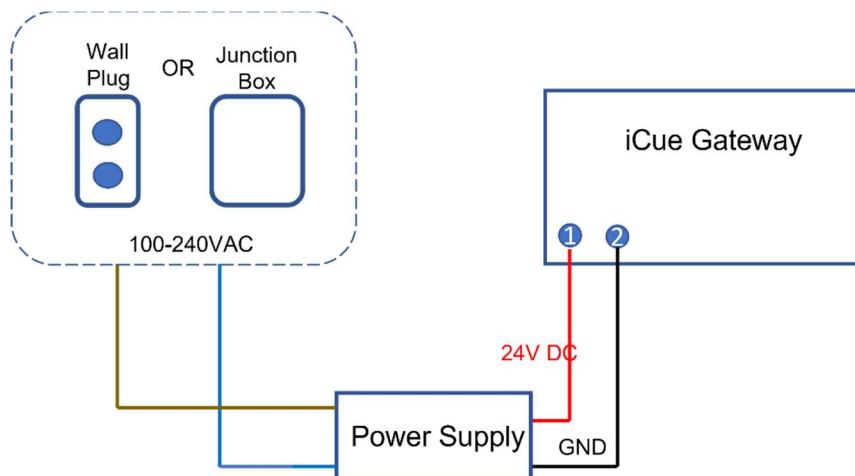


If the only AC voltages available are higher than 240V AC, stepdown transformer must be used to convert to a proper voltage level. The installation process of the transformer is outside the scope of this document and should only be done by a qualified electrician.

Example Installations

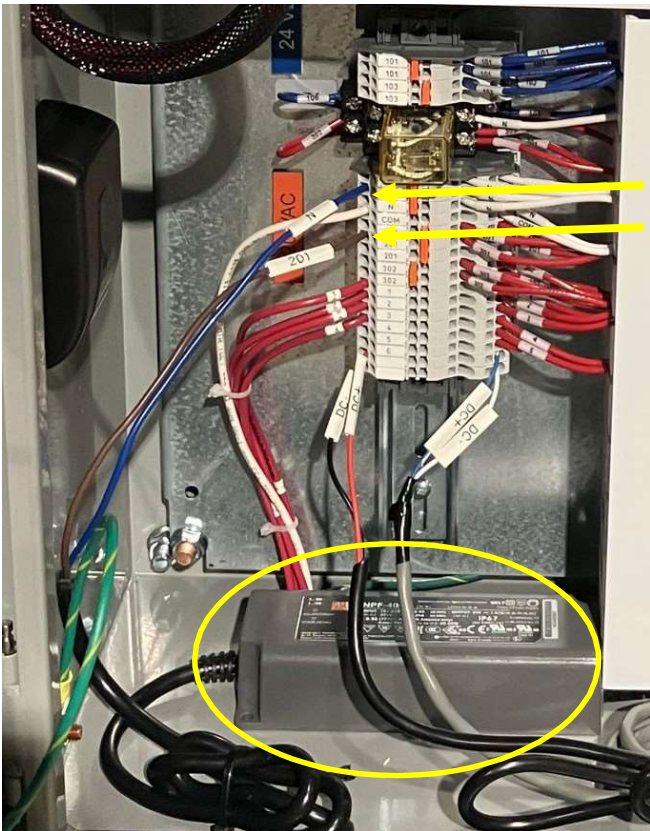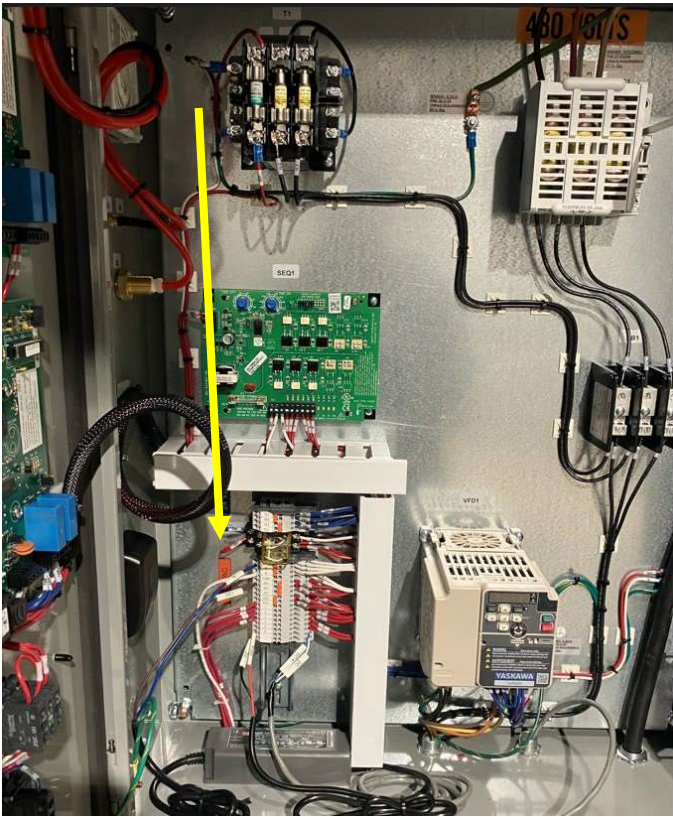

AC voltage leads from Power Supply


Power Supply

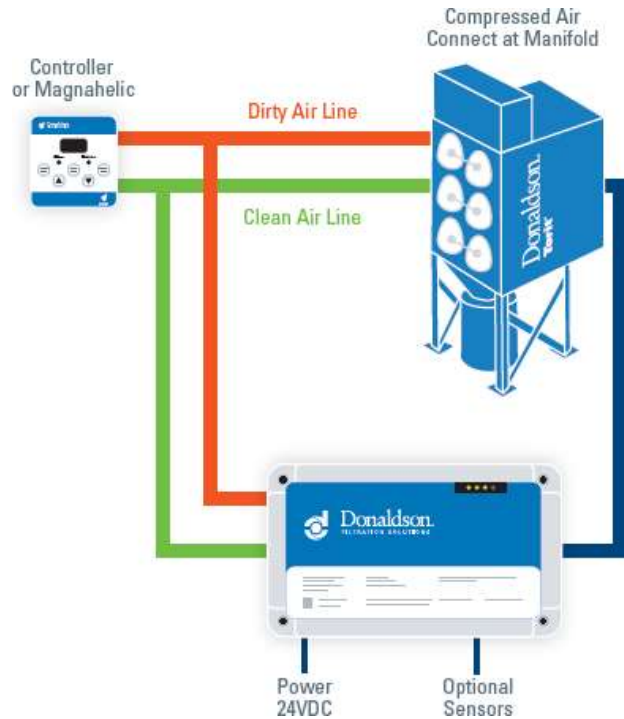

Low Pressure (ΔP) Pneumatic Installation

Note: The install kit contains barbed t-fittings for use with 3/16-in ID flexible tubing. Depending on the configuration of the dust collector, additional material may be required.

1. Screw by hand the provided barb straight connectors into the Clean and Dirty ports of the gateway.
2. Insert a t-fitting into each filter pressure sensing line (clean air and dirty air). Reference the dust collector manual for assistance in identifying the filter pressure sense lines.
 Notice: To prevent gateway damage from condensation, it is recommended that the gateway is installed above the location of the filter pressure sense line ports.
3. Using the supplied 3/16-in or 4 mm ID translucent blue tubing, connect the 'dirty air' pressure sense line to the Dirty port of the gateway.

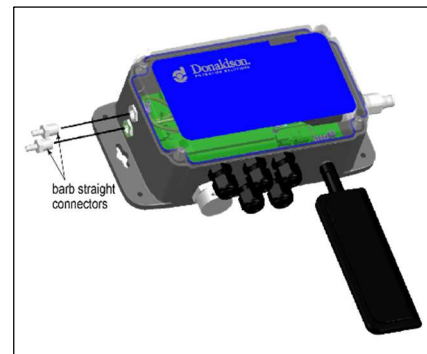

Step 1

- Using the supplied 3/16-in or 4 mm ID translucent blue tubing, connect the 'clean air' pressure sense line to the Clean port of the gateway.

Notice: To prevent inaccurate sensor readings, it is recommended the tubing is installed in such a manner to avoid low spots where condensation may accumulate.




Steps 2-4

High Pressure (Compressed Air) Pneumatic Installation

Note: Depending on the configuration of the dust collector, additional pipe fittings may be required.


- Isolate, lockout and depressurize the compressed air manifold.
- Install the 1/4 NPT push-to-connect fitting into an unused port on the compressed air manifold. If no ports are available, the fitting can be installed in a tee for the incoming air to the manifold.

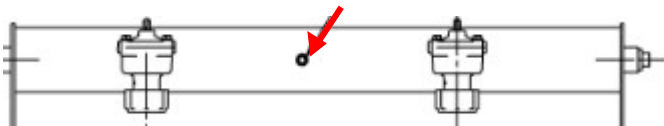

Courtesy Compressed Air Port on manifold that may be available

- Install the 1/4" or 6 mm OD solid blue tubing between the fitting on the compressed air manifold and the gateway. Restore the compressed air supply to the manifold.

Ideal installation has additional high-pressure port with a shut off valve as shown below. If additional port is not available, a t-fitting from the installation kit can be added to a depressurized line:

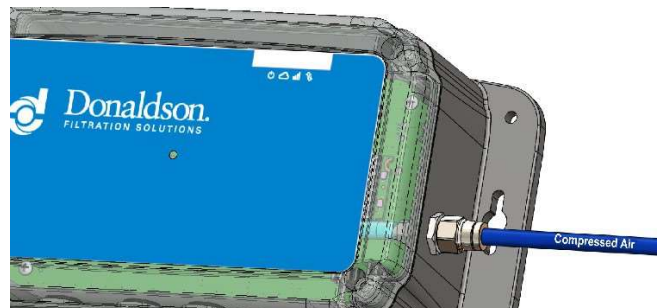


Gateway Final Assembly


1. Connect the cellular antenna and hand tighten.
2. Restore power to the gateway.
3. Once the gateway is energized and through its startup routine (all LEDs Red, Orange, Green). Verify the Power and iCue Service Connectivity LEDs turn green. This may take several minutes.
4. If the gateway connects to the iCue cloud properly, the first three LEDs from the left should be solid green, the fourth LED may blink periodically. If the first three LEDs do not turn green, refer to the troubleshooting section.



Gateway LED Lights

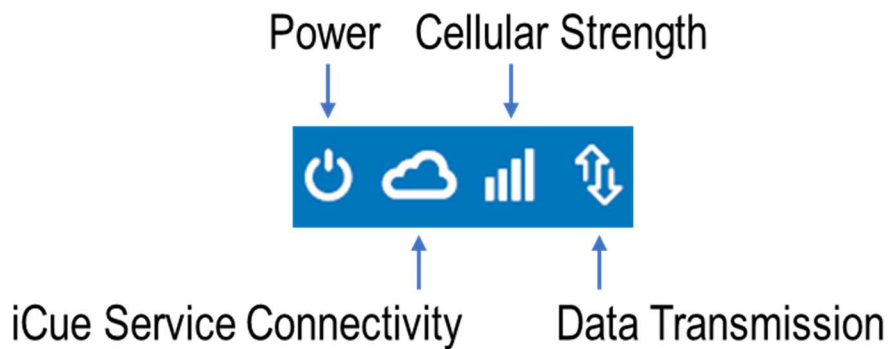

5 Replacement Parts List

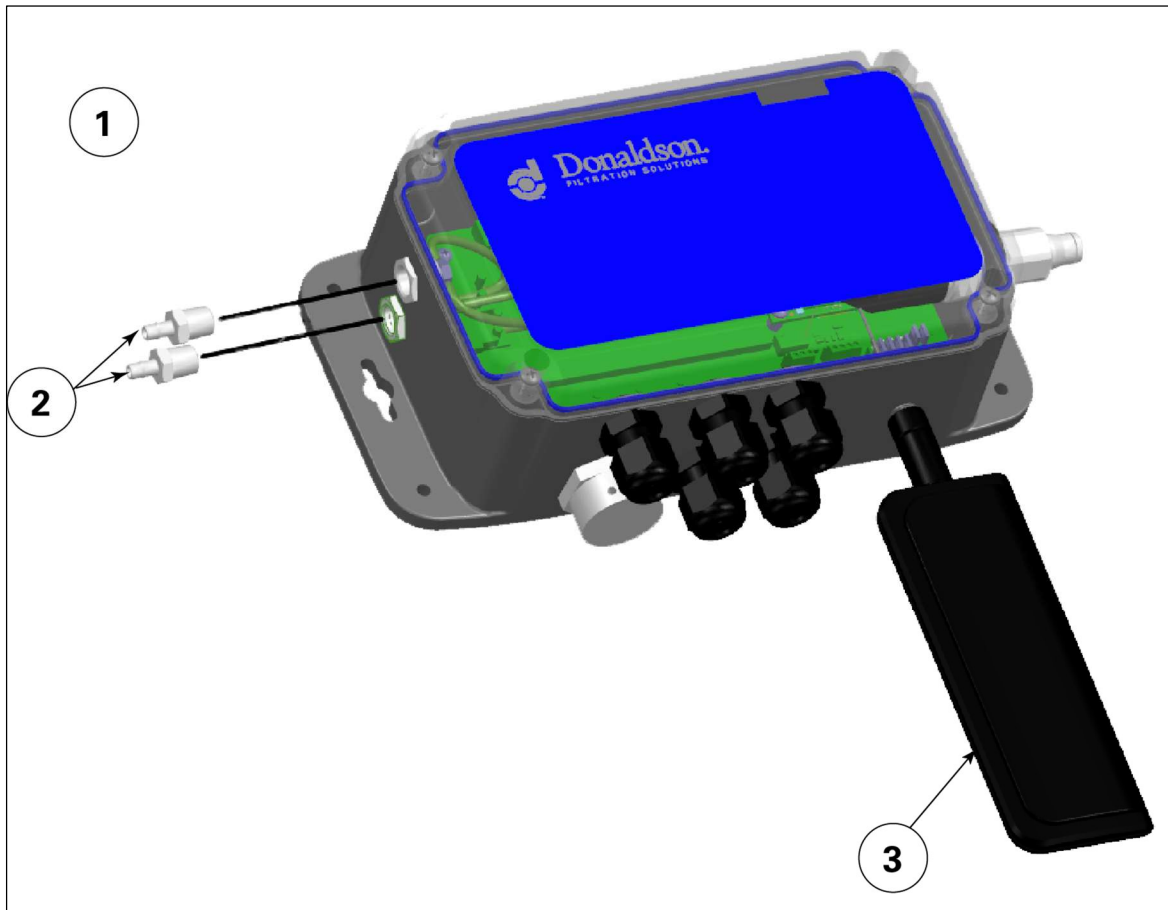

Item Number	Part Number	Description
1	R060161	Global Gateway Assembly
2	R060020	Antenna, RF, 4G LTE
3	R060214	Install Kit Imperial (includes power supply, magnets, tubing and fittings)
4	R060215	Install Kit Metric (includes power supply, magnets, tubing and fittings)
5	R060021	Power Supply, 24VDC, 40W

6 Terminal Strip Designators

The following table denotes the use of each terminal on the internal gateway terminal strip as well as any limitations.

Terminal Number	Terminal Name	Input Constraints
1	DC Power +	7-32 VDC
2	DC Power -	
3	Chassis Ground	
4	Analog Input 1 - 24VDC Output	Max output 25 mA
5	Analog Input 1 - Input Signal	10VDC, 20mA max
6	Analog Input 1 - Ground	
7	Analog Input 2 - 24VDC Output	Max output 25 mA
8	Analog Input 2 - Input Signal	10VDC, 20mA, max
9	Analog Input 2 - Ground	
10	Analog Input 3 - 24VDC Output	Max output 25 mA
11	Analog Input 3 - Input Signal	10VDC, 20mA max
12	Analog Input 3 - Ground	
13	Analog Input 4 - 24VDC Output	Max output 25 mA
14	Analog Input 4 - Input Signal	10VDC, 20mA max
15	Analog Input 4 - Ground	
16	Digital Input 1 - 3.3VDC Output	Dry Contact Supply - not for device power
17	Digital Input 1 - Input Signal	3.3VDC Max
18	Digital Input 1 - Ground	
19	Digital Input 2 - 3.3VDC Output	Dry Contact Supply - not for device power
20	Digital Input 2 - Input Signal	3.3VDC Max
21	Digital Input 2 - Ground	

7

Troubleshooting



Item	LED	Color	Input
1	Power	Green	Power On
		Orange	Data transmission trigger by wake-up switch
		Green	Connected to Donaldson iCue application
		Orange	Initializing connection to Donaldson iCue application
2	iCue Service Connectivity	Red	Connection failure
		Off	Not connected to Donaldson iCue application
		Green	Good connection quality
		Orange	Medium connection quality
3	Cellular Strength	Red	Low connection quality
		Off	No cellular connection
		Green	On while sending messages to Donaldson iCue application
		Green	On while sending messages to Donaldson iCue application

Troubleshooting


Problem	Remedy
Cellular Strength LED is OFF or Red	<p>Verify the cellular antenna is securely installed on the device and not damaged.</p> <p>Move the device to a higher location.</p> <p>Install a cabled antenna and move it to another location where the network signal can be properly received. A magnetic cable mount can be purchased when needed by contacting iCueSupport@Donaldson.com.</p>
iCue Service Connectivity LED is not Green	<p>If Cellular Strength LED is OFF or Red, reference troubleshooting for that condition.</p> <p>Note: it may take up to 5 minutes for the iCue Service Connectivity LED to turn green after the Cellular LED illuminates.</p> <p>Contact iCueSupport@Donaldson.com.</p>
LEDs Blinking	<p>The LEDs blink during unit start-up, infrequent normal processes and as a result of abnormal behavior. If you notice the LEDs blinking, monitor the unit for five minutes. If the LEDs continue to blink after this period of time, contact iCue Support at iCueSupport@Donaldson.com.</p>
If additional troubleshooting assistance is required, please contact iCueSupport@Donaldson.com.	

8 Optional Sensor Wiring


Only Donaldson approved optional sensors should be used with the Donaldson™ iCue™ Global Gateway. The gateway can accommodate up to four (4) analog sensors and two (2) digital inputs.

Analog Sensors


The Donaldson™ iCue™ Global Gateway can accommodate analog sensors with a 0-10VDC or 0/4-20mA output. A physical jumper on the gateway circuit board is used to select the sensor input type.

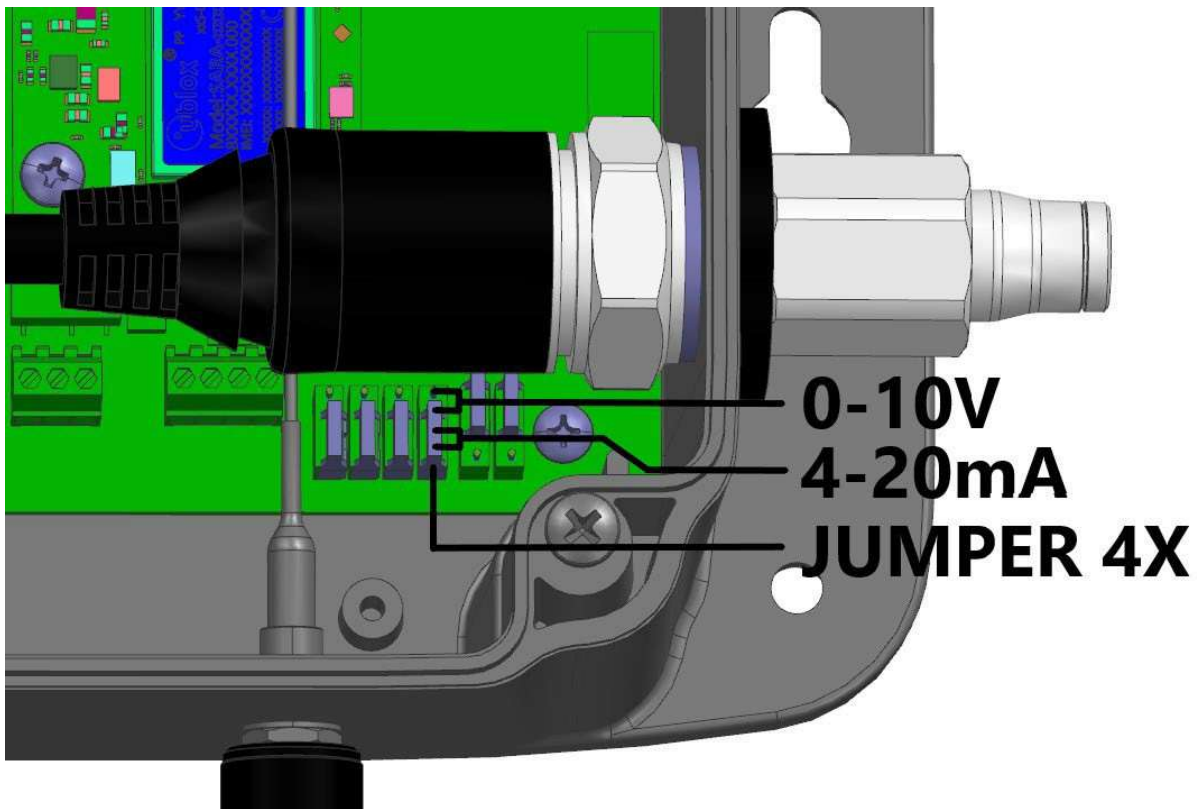


The Donaldson™ iCue™ Global Gateway can support 2, 3, or 4 wire sensors using the following wiring configurations. These diagrams are representative of installing an analog sensor on any of the four analog input lines.

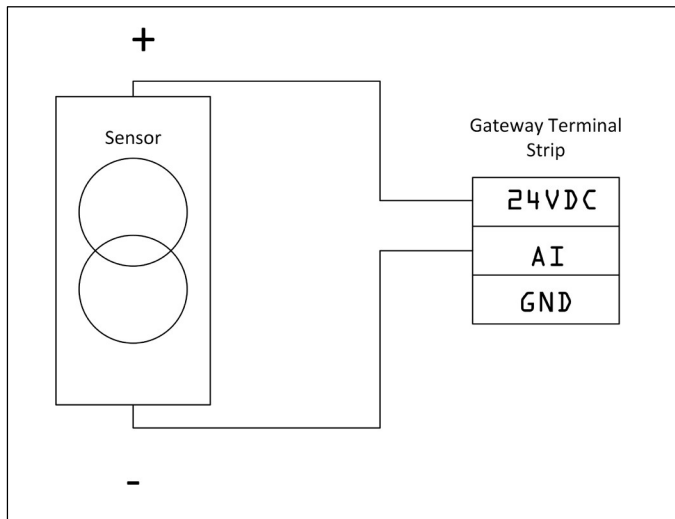

2 Wire Sensor

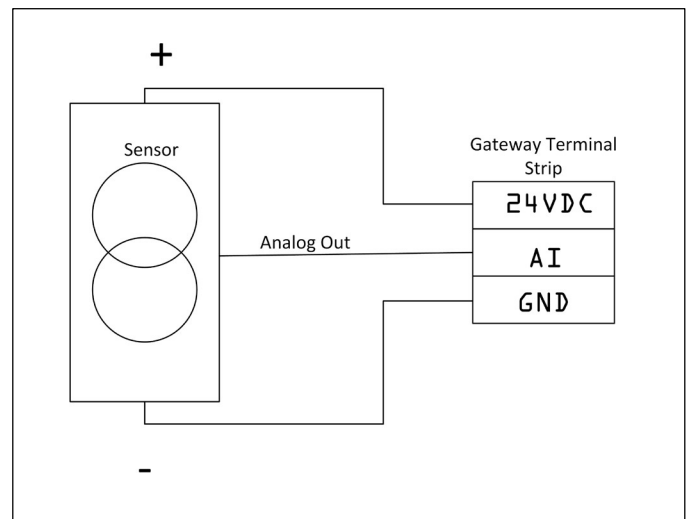


3 Wire Sensor

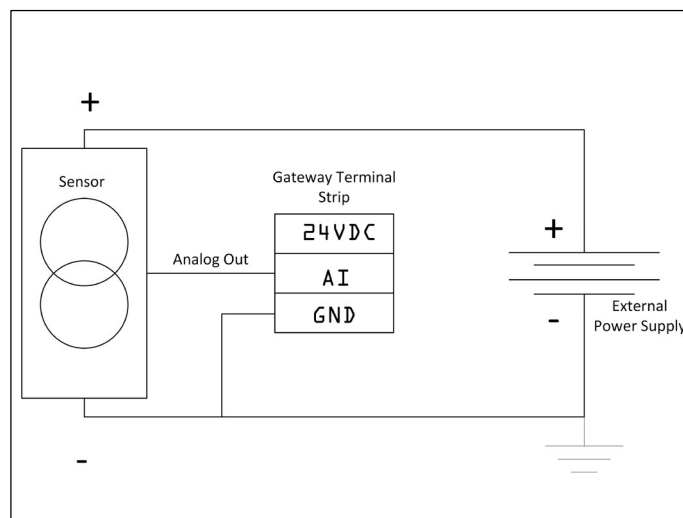

4 Wire Sensor


Digital Sensors

The Donaldson™ iCue™ Global Gateway can accommodate sensors with normally open or normally closed dry contacts. A physical jumper on the gateway circuit board is used to configure the board for the appropriate sensing scenario and should be set according to the following position:

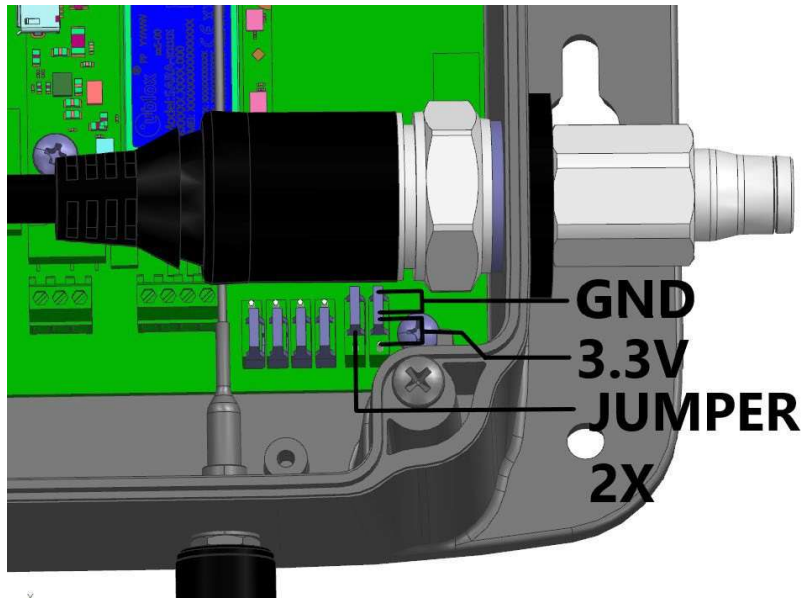

		Sensed Stated - By Gateway		
	Wiring Diagram	Unactuated Switch State	Actuated Switch State	Jumper Setting
Normally Open Contact - High	Digital High Switch	Low	High	GND
Normally Closed Contact - High	Digital High Switch	High	Low	GND
Normally Open Contact - Low	Digital Low Switch	High	Low	3V3
Normally Closed Contact - Low	Digital Low Switch	Low	High	3V3

Note: This is a low voltage connection. 3.3VDC may be present on one side of the contact.

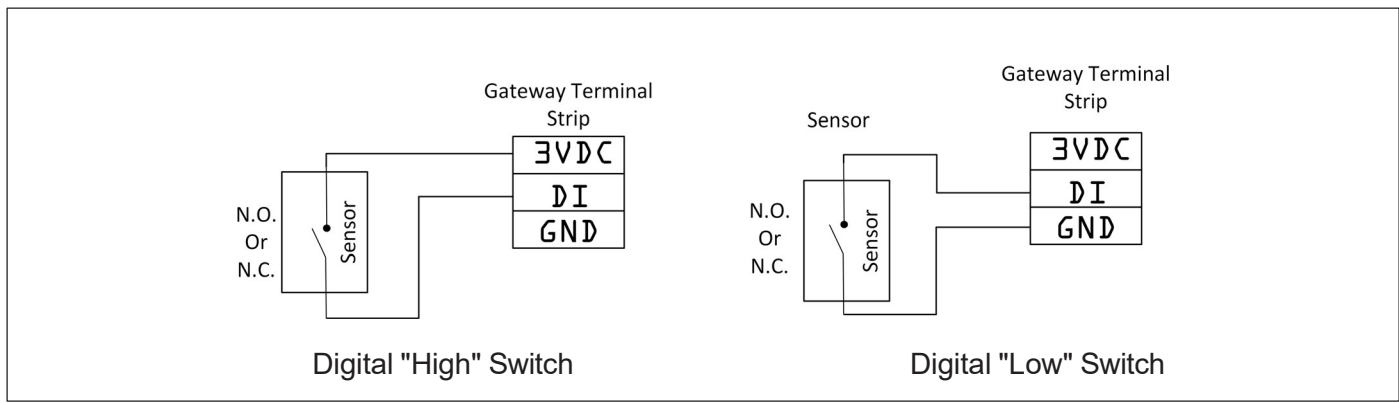

Appendix A - Regulatory Information

United States



Class A:

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contains FCC ID(s): XMR201903EG25G

Radio frequency radiation exposure information: This equipment complies with radiation exposure limits prescribed for an uncontrolled environment for fixed and mobile use conditions. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the body of the user or nearby persons. The system must only be used with approved antennas and accessories. Any changes or modifications made to this device that are not expressly approved by the cellular module manufacturer could void the user's authority to operate the equipment.

Canada

Radio Frequency (RF) Exposure Information

The radiated output power of this device is below the Innovation, Science and Economic Development Canada (ISED) radio frequency exposure limits. The device should be used in such a manner such that the potential for human contact during normal operation is minimized. This device has been evaluated and shown compliant with the ISED RF Exposure limits under mobile exposure conditions (antennas are greater than 20 cm from a person's body).

This device has been certified for use in Canada. Status of the listing in the ISED's REL (Radio Equipment List) can be found at the following web address: [Equipment Portal - Radio Equipment Search \(ic.gc.ca\)](http://www.ic.gc.ca/eic/site/eqp/portal/eqp-search.aspx) Additional Canadian information on RF exposure also can be found at the following web address [Equipment Portal - Radio Equipment List \(REL\) - Details for \(ic.gc.ca\)](http://www.ic.gc.ca/eic/site/eqp/portal/eqp-rel.aspx)

Contains IC ID(s): 10224A-201903EG25G

Any changes or modifications made to this device that are not expressly approved by the cellular module manufacturer could void the user's authority to operate the equipment.

CLASS A:

Innovation, Science and Economic Development Canada (ISED) Notices

This Class A digital apparatus complies with Canadian CAN ICES-3(A) / NMB-3(A).

Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

Informations concernant l'exposition aux frux fritti radio (RF)

La puissance de sortie émise par l'appareil de sans fil cet appareil est inférieure à la limite d'exposition aux fréquences radio d'Innovation, Sciences et Développement économique Canada (ISDE). L'appareil doit être utilisé de manière à minimiser les risques de contact humain lors du fonctionnement normal. Ce pe pmal.neme a éa éa pma et dd dal. conforme aux limites d'exposition aux frux fritti radio (RF) d'ISDE lorsqu'il est installl dans des produits hodu particuliers qui fonctionnent dans des conditions d'exposition 'exposappareils mobiles (les antennes se situent ituent ent sicientimt ent du corps d'une personne). Ce p. Ce pe). C est homologuu pour l'utilisation au Canada. Pour consulter l'entra correspondant orlorrespond dans la liste d'équipement radio (REL - Radio Equipment List) d'ISDE rendez-vous sur: <http://www.ic.gc.ca/app/sitt/reltel/srch/nwRdSrch.do?lang=fra>

Pour des informations suppllations su concernant l'exposition aux RF au Canada rendez-vous sur: <http://www.ic.gc.ca/eic/site/smt-gst.nsf/fra/sf08792.html>

CLASS A:

Avis d'Innovation, Sciences et Développement économique Canada (ISDE)

Cet appareil numérique de classe A est conforme aux normes canadiennes CAN ICES-3(A) / NMB-3(A).

Son fonctionnement est soumis aux deux conditions suivantes:

- Cet appareil ne doit pas causer d'interfser d'.
- Cet appareil doit accepter toute interfnterf, notamment les interfnterfes qui peuvent affecter son fonctionnement.
-

**Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information**

Unique Identifier: Donaldson™ iCue™ Global Gateway Part Number: R06015x

Responsible Party –

Donaldson Company, Inc.
1400 W 94th Street
Bloomington, MN
55431

1-833-898-5996

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Contains FCC ID: XMR201903EG25G



Donaldson Company Inc.
Declaration of Conformity
In accordance with UK Government Guidance

1. Product Model / Type:
 - a. Product Information: Donaldson iCue Gateway, Global
 - b. Model Name: R06015x (x can be optional for SIM pre-installed)
 - c. Batch/Serial: SW version: 2.2.0, HW Versions: 0
 - d. Specifications: HVAC sensor gateway
2. Manufacturer:
 - a. Name: Donaldson Company Inc.
 - b. Address: 1400 W 94th Street, Bloomington, MN 55431 USA
3. This declaration is issued under the sole responsibility of the product manufacturer.
4. The object of the declaration described above is in conformity with the relevant UK Statutory Instruments and their amendments:

2017 No 1206	The Radio Equipment Regulations 2017
2012 No 3032	Environmental Protection

5. We hereby declare that the product described above, to which this declaration of conformity refers to, is in conformity with the essential requirements of the following standards:

Reference & Date	Title
ETSI-EN 301 489-1 V2.2.3	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements; Harmonised Standard for Electromagnetic Compatibility
ETSI-EN 301 489-19 V1.2.1	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short Range Devices (SRD) operating on frequencies between 9 kHz and 246 GHz; Harmonised Standard for Electromagnetic Compatibility
ETSI-EN 301 489-52 V1.2.1	Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short Range Devices (SRD) operating on frequencies between 9 kHz and 246 GHz; Harmonised Standard for Electromagnetic Compatibility
EN 55032:2012/ AC:2013 Class A	ELECTRICAL EQUIPMENT FOR MEASUREMENT, CONTROL AND LABORATORY USE - EMC REQUIREMENTS - PART 1: GENERAL REQUIREMENTS
EN 55035:2017 +A11:2020	Short Range Devices (SRD) operating in the frequency range 25 MHz to 1 000 MHz; Part 2
EN 301 511 V12.5.1	Short Range Devices (SRD) operating in the frequency range 25 MHz to 1 000 MHz; Part 2
EN 301 908-1 V15.1.1	Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz to 300 GHz)
IEC 62368-1:2014/A11:2017	Audio/video, information and communication technology equipment - Part 1: Safety requirements
IEC 62321-3-1:2013; IEC 62321-4:2013+AMD1:2017; IEC 62321-5:2013; IEC 62321-6:2015; IEC 62321-7-1:2015; IEC 62321-7-2:2017; IEC 62321-8:2017	Environmental protection 2012 No 3032, RoHS

6. Additional Information: NA
7. The technical documentation for the Radio product is available from:

Date of Issue: November 11, 2022
Name: Candemir Toklu
Function: Engineering Manager
Signature:



Donaldson Company, Inc.
1400 West 94th Street
Bloomington, MN 55431 USA

Mailing Address
PO Box 1299
Minneapolis, MN 55440 USA

EU Declaration of Conformity

Radio Equipment:

Name: Global Gateway

Model: R06015x

This declaration of conformity is issued under sole responsibility of the manufacturer who declares that the above described radio equipment is in conformity with the following relevant Union harmonization legislations:

Radio Equipment Directive 2014/53/EU (RED)
RoHS Directive 2011/65/EU and amendment 2015/863/EU

The conformity assessment procedure used for this declaration is Annex III of the RED 2014/53/EU and the product will bear the CE-Marking CE accordingly.

Conformity to the essential requirements of the legislation(s) have been demonstrated by using the following standards:

Radio Equipment Directive 2014/53/EU		RoHS Directive 2011/65/EU and amendment 2015/863/EU
EN 301 511 V12.5.1	EN 55032:2012/AC:2013 Class A	IEC 62321-3-1:2013;
EN 301 908-1 V15.1.1	EN 301 489-1 v2.2.3	IEC 62321-4:2013+AMD1:2017;
EN 55035:2017 +A11:2020	EN 301 489-19 v1.2.1	IEC 62321-5:2013;
EN 62368-1:2014/A11:2017	EN 301 489-52 v1.2.1	IEC 62321-6:2015;
		IEC 62321-7-1:2015; IEC 62321-7-2:2017;
		IEC 62321-8:2017

The following accessory allows the object of the declaration described above to operate as intended and in conformity with this EU declaration of conformity: Software version 2.2.0 and following versions.

Signed for and on behalf of: Donaldson

Place and date of release: November 11, 2022 in Bloomington, MN, USA

Signature:

Name, function: Candemir Toklu, Engineering Manager

